

Wall Mount Ticket Dispenser


User Manual

Content Page

PAGE

| | |
|----------------------------|---|
| 1. ITD Overview | 3 |
| 2. Open Ticket Dispenser | 4 |
| 3. Changing the Paper Roll | 5 |
| 4. ITD Light Indicators | 7 |

Wall ITD Overview

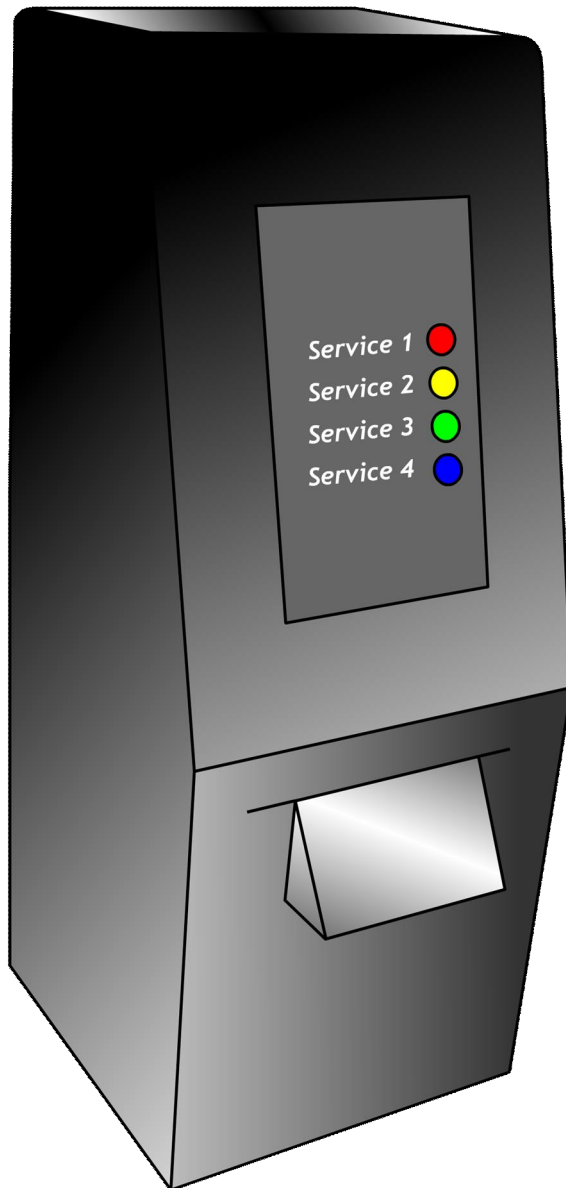

Lonsto[®]

*Wall Mount
Thermal Ticket
Printer*

Up to 6 Services

H: 46 CM


W: 18cm

D: 18cm (bottom)

D: 11.5cm (top)


Opening the Ticket Dispenser



1. Insert Key into the Top of the Ticket Dispenser
2. Turn Key Clock Wise 
3. Open the Lid Downwards as shown below



Changing the Paper Roll

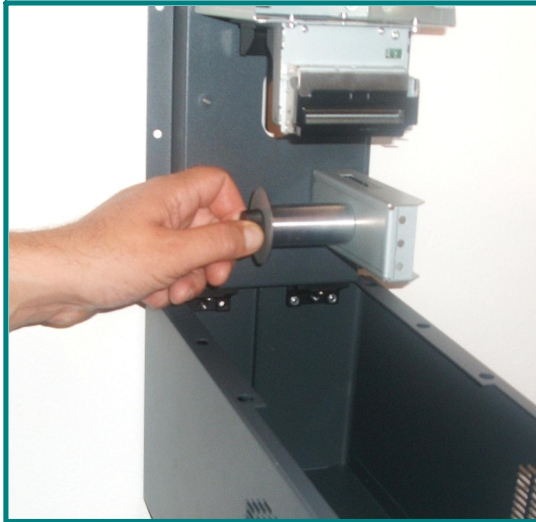


1. Turn the Spindle Screw Anti-Clock wise and remove the Screw and Washer. ↺
2. Once removed, insert the paper roll into the spindle as shown below.
3. Once inserted, place washer re-screw the spindle screw anti-clockwise to hold ticket roll in place. ↺



Changing the Paper Roll



4. To feed the ticket paper into the printer mechanism. Push the Click on the side of the printer as shown on the left and lift the Printer Head.
5. Lift the Printer Head and feed the ticket through and close the lid as illustrated below

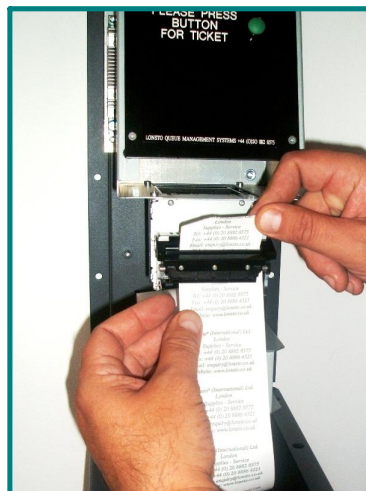

ITD Light Indicators



Top LED, Green, indicates the system has power and is on

Middle LED, Amber, indicates system status is OK, if this is off then there is a system problem.

Bottom LED, Red, paper out.